



## Pipe Sensor Insulation Jacket

### Installation Guidelines



Select the required jacket with reference to the Identification label



Place flat with the internal surface upwards



Roll to remove the excess air to assist installation



Release and wrap circumferentially around the pipe



Catch the Velcro at various points along the length to temporary hold in place



Work from one end to the other releasing and pulling tight/ straightening the Velcro flap onto the jacket edge



Having secured the velcro flap fastenings pull through the D ring straps



Installation Complete