# Honeywell





The Sensepoint range of flammable, toxic and Oxygen gas detectors offer users a high quality, low cost solution to their industrial gas monitoring needs.

# Sensepoint





#### **Fit For Purpose**

- Flammable, toxic and Oxygen versions available
- High performance, low cost
- · Suitable for new and retro fit applications

#### **Proven Sensor Technology**

- Surecell™ electrochemical sensors
- Poison resistant catalytic bead
- Fast and reliable
- Typical 2 to 5 years operational life

#### **ATEX/IECEx Certified**

- Complies with the latest standards
- Hazardous area approval and performance
- IP65/67 for use in harsh environments

#### Easy to Use

- Factory set operation
- Simple to replace
- Minimal training required

#### **Range of Accessories**

- Weatherproof cap
- Flow adaptor
- · Duct mounting kit
- Collecting cone

The Sensepoint range of flammable, toxic and Oxygen gas detectors offer users a high quality, low cost solution to their industrial gas monitoring needs. Installation in potentially explosive atmospheres is made by the use of a suitable Ex d or Ex e approved junction box. The industry standard outputs from Sensepoint are connected to either a choice of Honeywell Analytics' controllers or 3rd party DCS/ PLC systems. Both flammable and toxic versions are certified to the latest ATEX/ IECEx safety and performance standards.



The flammable detector is available in either % LEL or PPM detection range versions and provides an industry standard mV bridge output. Typical life expectancy is greater than 5 years, after which the detector is simply replaced with a new one

The toxic detectors are supplied pre calibrated for easy installation and provide an industry standard 2 wire 4-20mA loop output. User connections are Ex d, while front end Intrinsic Safety (IS) design allows for easy exchange of the replaceable sensor while powered. IS design also removes the need for a sinter enabling very fast speed of response and detection of 'sticky' gases such as Chlorine and Ammonia.

Sensepoint has proven its suitability across a wide range of demanding applications by delivering high performance and reliability at an affordable cost.


# **Installation Details**



### **Dimensions**

#### Flammable % LEL or PPM Version

### **Toxic or Oxygen Version**

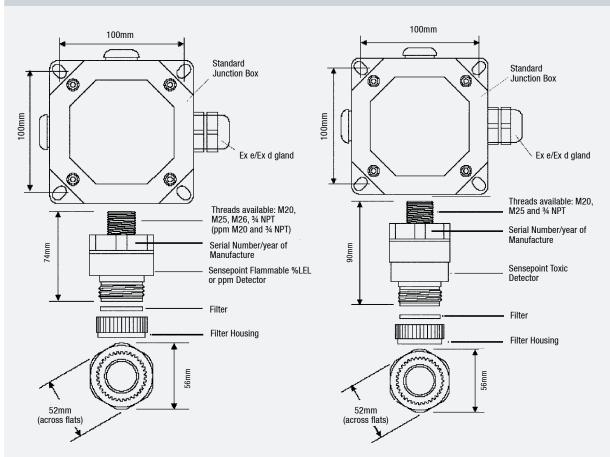

Sensepoint flammable and toxic gas detectors are installed using suitable Ex d or Ex e junction boxes. The standard junction box available from Honeywell Analytics includes an earth continuity plate for added RFI protection. The detectors have a choice of mounting thread size to match local preferences.

The Sensepoint range of flammable and toxic detectors are designed for use with a wide range of controllers available from Honeywell Analytics or with 3rd party control equipment accepting their industry standard output signals.

# **Installation Details**







## **Electrical Connections**

# **Typical Terminal Connections**


### Flammable % LEL Version

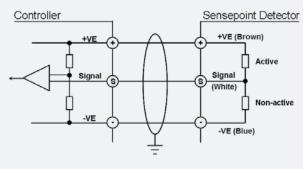


3 Wire mV Bridge Circuit

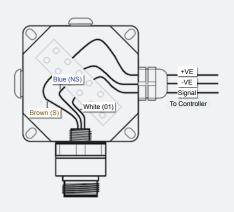


# Toxic or Oxygen Version

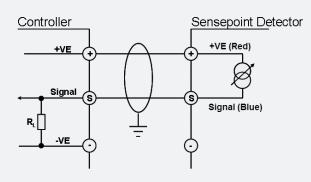


2 Wire 4-20mA (Sink)

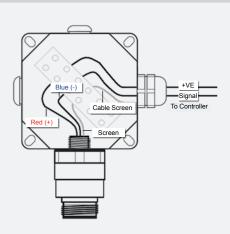

## **Flammable PPM Version**

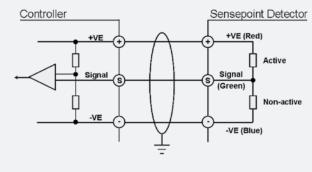

3 Wire mV Bridge Circuit

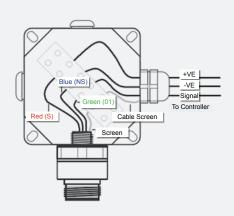

# **Technical Specification**





Gas & Range	Flammable 0-100% LEL	Flammable PPM (Typically 0-10% LEL)	Hydrogen Sulphide (H <sub>2</sub> S) 20/50/100ppm	Carbon Monoxide (CO) 100/200/500ppm	Ammonia (NH <sub>3</sub> ) 50/1000ppm	Chlorine (Cl <sub>2</sub> ) 5/15ppm	0xygen (0 <sub>2</sub> ) 25% V / V	Hydrogen (H <sub>2</sub> ) 1000/10000ppm	Sulfur Dioxide (SO <sub>2</sub> ) 15/50ppm	Nitric Oxide (NO) 100ppm	Nitrogen Dioxide (NO <sub>2</sub> ) 10ppm	
Operating Temp	-40 to +80°C1	-30 to +65°C	-25 to +50°C	-20 to +50°C	-20 to +40°C	-20 to +50°C			-15 to +40°C			
Operating Humidity		Continuous: 20 to 90% RH (non-condensing). Intermittent: 10 to 99% RH (non-condensing)										
Storage Conditions	0 to 25°C; 3	0 to 70% RH	0 to 25°C; 30 to 70% RH									
Operating Pressure		90 to 110kPa										
Warm-up Time	< 10 minutes   < 20 minutes		< 3 minutes			< 5 minutes		< 3 minutes		12 hours	1 hour	
Response Time												
T20			< 6 secs	< 5 secs	_	< 10 secs	< 3 secs	-	-	< 3 secs	< 15 secs	
T50	< 5	secs	< 15 secs	< 12 secs	< 10 secs	< 20 secs	< 5 secs	< 10 secs	< 10 secs	< 5 secs	< 30 secs	
T90	< 10	) secs	< 40 secs	< 30 secs	< 65 secs	< 105 secs	< 10 secs	< 45 secs	< 90 secs	< 30 secs	< 60 secs	
Supply	200mA; 0.7	'W maximum	18 to 30VDC; 0.9W maximum									
Signal Output	mV t	oridge				Lo	oop powered 4-20	mA				
Linearity	< 5% fsd or ±	10% of reading					< 5% fsd					
Operating Life	5 years (typical)		2 years	s (typical)	18 month	s (typical)	1 year (typical)		18 month	s (typical)		
Storage Life	Typically, over 5 years when in original sealed packaging		6 months.									
Stability (zero)												
with time*	< ±3%	fsd / yr					< ±2% fsd / yr					
with temperature**	< ±1% fsd²	< ±3% fsd	< ±	5% fsd	< ±6% fsd	< ±2% fsd		< ±2% fsd	< ±5% fsd			
with humidity	< ±1% fsd		$< \pm 10\%$ fsd $< \pm 2\%$ fsd $< \pm 10\%$		< ±10% fsd	< ±2% fsd	< ±2% fsd < ±10% f		< ±10% fsd			
Stability (span)												
with time*	< ±3%	fsd / yr	< ±2% fsd / yr	< ±4% fsd / yr	< ±20% fsd / yr	< 10% fsd / yr	< ±20% fsd / yr		< ±2%	fsd / yr		
with temperature***	< ±3% fsd	< ±8% fsd	< ±25% fsd	< ±20% fsd	< ±20% fsd	< 40% fsd	< ±10% fsd	< ±60% fsd	< ±15% fsd	< ±2	25% fsd	
with humidity	< ±2	% fsd	< ±10% fsd	< ±2% fsd	< ±10% fsd	< ±2% fsd	< ±1% fsd	< ±2% fsd		< ±10% fsd		
Weight	190g		185g			205g		185g				
Construc. Materials	Polyphenylene Sulphide (PPS)											
I.P. (NEMA) Rating	IP65 (standard), IP67 (with weather protection fitted)											
Certification Details (ATEX/ IECEx)	© II 2 GD Ex d IIC Gb T85°C  T <sub>mb</sub> -40°C to +55°C © II 2 GD Ex d IIC Gb T100°C  T <sub>mb</sub> -40°C to +70°C © II 2 GD Ex d IIC Gb T135°C  T <sub>mb</sub> -40°C to +80°C © tb IIIC A21 Db IP67  Baseefa08ATEX0265X  IECEX BAS08.0068X											
Other Certifications	Russian: GOST											
Applicable Standards	This product complies with the relevant CE standards including: EMC to EN50270, Flammable sensor to EN60079-29-1											

- <sup>1</sup> High temp range version available -55 to +150°C See separate datasheet DS0303
- <sup>2</sup> Over temp range -20 to +55°C
- $^{\star}$  = % of range (fsd) per year
- \*\* Over operating temperature range
- \*\*\* = % of applied concentration

#### **Ordering Information**

Accessories				
00780-A-0100	Term Hsg – Bartec DE1155 With Continuity Plate 1 x 25mm – 3 x 20mm Entries – ATEX Approved			
00780-A-0160	Right Angle Mounting Bracket For Ceiling Mounting			
02000-A-1635	Series 2000 Weather Housing Use With Toxic Sensor			
02000-A-1640	Series 2000 Weather Housing use With Flammable Sensor			
02000-A-1642	Series 2000 Collecting Cone Use With Flammable Sensor			
02000-A-1645	Series 2000 Calibration Flow Housing Assembly (Flam and Toxic)			
02000-A-3120	Series 2000 Flow Housing Assembly Plastic			
2106B1110	Catalytic Bridge To 4-20mA Converter			
2106B2114	Toxic Calibration Kit including Calibration Cover, Removal Tool, Potentiometer Adjustment Tool			
2106D2055	M36 / M40 Thread Adaptor			
225-262-138	Cable Gland And Caps, 20mm, Nylon			
Spares				
2106B1545	0, Electrochemical Cell Exchange Kit			
2106B1546	SO <sub>2</sub> Electrochemical Cell Exchange Kit			
2106B1547	Cl <sub>2</sub> Electrochemical Cell Exchange Kit			
2106B1548	CO Electrochemical Cell Exchange Kit			
2106B1549	H <sub>2</sub> S Electrochemical Cell Exchange Kit			
2106B1594	NO Electrochemical Cell Exchange Kit			
2106B1595	NH <sub>3</sub> 0-1000ppm Electrochemical Cell Exchange Kit			
2106B1596	NH <sub>3</sub> 0-50ppm Electrochemical Cell Exchange Kit			
2106B1597	H <sub>2</sub> 0-1000ppm Electrochemical Cell Exchange Kit			
2106B1598	H <sub>2</sub> 0-10000ppm Electrochemical Exchange Kit			
2106B1599	NO <sub>2</sub> 0-10ppm Electrochemical Exchange Kit			
Calibration Equipment				
	Contact your local Honeywell Analytics representative for details of suitable calibration equipment			

#### Find out more

www.honeywellanalytics.com

#### **Contact Honeywell Analytics:**

#### Europe, Middle East, Africa, India

Life Safety Distribution AG Javastrasse 2 8604 Hegnau Switzerland

Tel: +41 (0)44 943 4300 Fax: +41 (0)44 943 4398 India Tel: +91 124 4752700 gasdetection@honeywell.com

#### **Americas**

Honeywell Analytics Inc. 405 Barclay Blvd. Lincolnshire, IL 60069 USA

Tel: +1 847 955 8200 Toll free: +1 800 538 0363 Fax: +1 847 955 8210 detectgas@honeywell.com

#### **Asia Pacific**

Honeywell Analytics Asia Pacific #508, Kolon Science Valley (I) 187-10 Guro-Dong, Guro-Gu Seoul, 152-050

Korea

Tel: +82 (0)2 6909 0300 Fax: +82 (0)2 2025 0329 analytics.ap@honeywell.com

### **Technical Services**

EMEAI: HAexpert@honeywell.com US: ha.us.service@honeywell.com AP: ha.ap.service@honeywell.com

Please Note:

While every effort has been made to ensure accuracy in this publication, no responsibility can be accepted for errors or omissions.

Data may change, as well as legislation, and you are strongly advised to obtain copies of the most recently issued regulations, standards, and guidelines. This publication is not intended to form the basis of a contract.

H\_Sensepoint\_DS01069\_V6\_EMEAI 09/12 © 2012 Honeywell Analytics

210681200   Sensepoint 0-100% LEL Flammable Sensor M20	Sensepoint	Combustible
2106B1201 Sensepoint 0-100% LEL Flammable Sensor M26 2106B1202 Sensepoint 0-100% LEL Flammable Sensor M26 2106B1204 Sensepoint 0-100% LEL Flammable Sensor M26 2106B1205 Sensepoint prm (0-10% LEL) Flammable Sensor M20 2106B1209 Sensepoint prm (0-10% LEL) Flammable Sensor M20 2106B1209 Sensepoint prm (0-10% LEL) Flammable Sensor M20 2106B1400 Sensepoint H <sub>2</sub> S 0-20 ppm Toxic Sensor M20 2106B1401 Sensepoint H <sub>2</sub> S 0-20 ppm Toxic Sensor M20 2106B1401 Sensepoint H <sub>2</sub> S 0-20 ppm Toxic Sensor M20 2106B1500 Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor M20 2106B1500 Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor M20 2106B1500 Sensepoint H <sub>2</sub> S 0-20 ppm Toxic Sensor M25 2106B1501 Sensepoint H <sub>2</sub> S 0-20 ppm Toxic Sensor M25 2106B1502 Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor M25 2106B1700 Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor M25 2106B1701 Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor 34*NPT 2106B1702 Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor 34*NPT 2106B1703 Sensepoint C0 0-100 ppm Toxic Sensor M20 2106B1406 Sensepoint C0 0-200 ppm Toxic Sensor M20 2106B1406 Sensepoint C0 0-100 ppm Toxic Sensor M20 2106B1506 Sensepoint C0 0-100 ppm Toxic Sensor M20 2106B1507 Sensepoint C0 0-200 ppm Toxic Sensor M25 2106B1507 Sensepoint C0 0-200 ppm Toxic Sensor M25 2106B1707 Sensepoint C0 0-200 ppm Toxic Sensor M25 2106B1707 Sensepoint C0 0-200 ppm Toxic Sensor M25 2106B1708 Sensepoint C0 0-200 ppm Toxic Sensor M25 2106B1709 Sensepoint C0 0-200 ppm Toxic Sensor M25 2106B1701 Sensepoint C0 0-200 ppm Toxic Sensor M25 2106B1701 Sensepoint C0 0-200 ppm Toxic Sensor M25 2106B1701 Sensepoint C0 0-200 ppm Toxic Sensor M25 2106B1707 Sensepoint C0 0-200 ppm Toxic Sensor M25 2106B1710 Sensepoint H <sub>2</sub> 0-100 ppm Toxic Sensor M25 2106B1711 Sensepoint H <sub>2</sub> 0-100 ppm Toxic Sensor M25 2106B1711 Sensepoint H <sub>3</sub> 0-100 ppm Toxic Sensor M25 2106B1713 Sensepoint H <sub>4</sub> 0-100 ppm Toxic Sensor M25 2106B1714 Sensepoint H <sub>4</sub> 0-100 ppm Toxic Sensor M25 2106B1715 Sensepoint H <sub>4</sub> 0-100 ppm Toxic Sensor M25 2106B1716 Sensepoint H <sub>4</sub> 0-100 ppm Toxic Sensor M25 2106B1718 Sensepoint H <sub>4</sub> 0-100	•	
2106B1202	2106B1201	
2106B1203   Sensepoint 0-100% LEL Flammable Sensor M26 (VO1AB pellistor)	2106B1202	·
2106B1205   Sensepoint ppm (0-10% LEL) Flammable Sensor M20	2106B1203	Sensepoint 0-100% LEL Flammable Sensor M26 (VQ1AB pellistor)
Sensepoint Toxic	2106B1204	Sensepoint 0-100% LEL Flammable Sensor ¾"NPT
Sensepoint Toxic	2106B1205	Sensepoint ppm (0-10% LEL) Flammable Sensor M20
2106B1400   Sensepoint H,S 0-20 ppm Toxic Sensor M20	2106B1209	Sensepoint ppm (0-10% LEL) Flammable Sensor ¾"NPT
2106B1401         Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor M20           2106B1502         Sensepoint H <sub>2</sub> S 0-20 ppm Toxic Sensor M25           2106B1501         Sensepoint H <sub>2</sub> S 0-20 ppm Toxic Sensor M25           2106B1502         Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor M25           2106B1502         Sensepoint H <sub>2</sub> S 0-20 ppm Toxic Sensor M25           2106B1700         Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor ¾*NPT           2106B1701         Sensepoint C0 0-100 ppm Toxic Sensor M20           2106B1406         Sensepoint C0 0-100 ppm Toxic Sensor M20           2106B1406         Sensepoint C0 0-200 ppm Toxic Sensor M20           2106B1406         Sensepoint C0 0-200 ppm Toxic Sensor M20           2106B1505         Sensepoint C0 0-500 ppm Toxic Sensor M20           2106B1506         Sensepoint C0 0-500 ppm Toxic Sensor M25           2106B1507         Sensepoint C0 0-500 ppm Toxic Sensor M25           2106B1705         Sensepoint C0 0-500 ppm Toxic Sensor M25           2106B1706         Sensepoint C0 0-500 ppm Toxic Sensor M25           2106B1707         Sensepoint C0 0-500 ppm Toxic Sensor M26           2106B1708         Sensepoint C0 0-500 ppm Toxic Sensor M27           2106B1709         Sensepoint C0 0-500 ppm Toxic Sensor M20           2106B1700         Sensepoint C0 0-500 ppm Toxic Sensor M20           2106B1710         Se	Sensepoint	Toxic
2106B1402   Sensepoint H <sub>2</sub> S 0-20 ppm Toxic Sensor M25		
2106B1500   Sensepoint H <sub>2</sub> S 0-20 ppm Toxic Sensor M25     2106B1501   Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor M25     2106B1702   Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor M25     2106B1701   Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor ¾*NPT     2106B1702   Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor ¾*NPT     2106B1703   Sensepoint C0 0-100 ppm Toxic Sensor M20     2106B1405   Sensepoint C0 0-200 ppm Toxic Sensor M20     2106B1406   Sensepoint C0 0-200 ppm Toxic Sensor M20     2106B1407   Sensepoint C0 0-100 ppm Toxic Sensor M20     2106B1407   Sensepoint C0 0-200 ppm Toxic Sensor M20     2106B1505   Sensepoint C0 0-200 ppm Toxic Sensor M25     2106B1506   Sensepoint C0 0-200 ppm Toxic Sensor M25     2106B1507   Sensepoint C0 0-200 ppm Toxic Sensor M25     2106B1706   Sensepoint C0 0-200 ppm Toxic Sensor ¾*NPT     2106B1707   Sensepoint C0 0-500 ppm Toxic Sensor ¾*NPT     2106B1707   Sensepoint C0 0-500 ppm Toxic Sensor ¾*NPT     2106B1410   Sensepoint C1 <sub>2</sub> 0-5 ppm Toxic Sensor M20     2106B1510   Sensepoint C1 <sub>2</sub> 0-15 ppm Toxic Sensor M20     2106B1510   Sensepoint C1 <sub>2</sub> 0-15 ppm Toxic Sensor M20     2106B1511   Sensepoint C1 <sub>2</sub> 0-15 ppm Toxic Sensor M25     2106B1512   Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M25     2106B1413   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1514   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1515   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1515   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1515   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1516   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1517   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1718   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1719   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1716   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1716   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1516   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1717   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1718   Sensepoint NH <sub>3</sub> 0-100	2106B1401	
2106B1501   Sensepoint H <sub>2</sub> S 0-50 ppm Toxic Sensor M25	2106B1402	. 2
2106B1502   Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor M25		
2106B1700   Sensepoint H <sub>2</sub> S 0-20 ppm Toxic Sensor ¾"NPT     2106B1701   Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor ¾"NPT     2106B1405   Sensepoint CO 0-100 ppm Toxic Sensor M20     2106B1406   Sensepoint CO 0-200 ppm Toxic Sensor M20     2106B1407   Sensepoint CO 0-500 ppm Toxic Sensor M20     2106B1407   Sensepoint CO 0-500 ppm Toxic Sensor M20     2106B1505   Sensepoint CO 0-200 ppm Toxic Sensor M25     2106B1506   Sensepoint CO 0-200 ppm Toxic Sensor M25     2106B1507   Sensepoint CO 0-500 ppm Toxic Sensor M25     2106B1707   Sensepoint CO 0-500 ppm Toxic Sensor M25     2106B1708   Sensepoint CO 0-500 ppm Toxic Sensor ¾"NPT     2106B1709   Sensepoint CO 0-500 ppm Toxic Sensor ¾"NPT     2106B1701   Sensepoint CO 0-500 ppm Toxic Sensor ¾"NPT     2106B1410   Sensepoint CI 0 0-500 ppm Toxic Sensor M20     2106B1511   Sensepoint CI 0 0-50 ppm Toxic Sensor M20     2106B1510   Sensepoint CI 0 0-50 ppm Toxic Sensor M20     2106B1511   Sensepoint CI 0 0-15 ppm Toxic Sensor M25     2106B1511   Sensepoint CI 0 0-15 ppm Toxic Sensor M25     2106B1711   Sensepoint CI 0 0-15 ppm Toxic Sensor M20     2106B1412   Sensepoint CI 0 0-15 ppm Toxic Sensor M20     2106B1413   Sensepoint NH 0-100 ppm Toxic Sensor M20     2106B1513   Sensepoint NH 0-100 ppm Toxic Sensor M20     2106B1513   Sensepoint NH 0-50 ppm Toxic Sensor M20     2106B1513   Sensepoint NH 0-50 ppm Toxic Sensor M20     2106B1513   Sensepoint NH 0-50 ppm Toxic Sensor M20     2106B1514   Sensepoint NH 0-50 ppm Toxic Sensor M25     2106B1515   Sensepoint NH 0-50 ppm Toxic Sensor M25     2106B1714   Sensepoint NH 0-00 ppm Toxic Sensor M25     2106B1715   Sensepoint NH 0-000 ppm Toxic Sensor M25     2106B1716   Sensepoint NH 0-000 ppm Toxic Sensor M25     2106B1717   Sensepoint NH 0-000 ppm Toxic Sensor M20     2106B1517   Sensepoint NH 0-000 ppm Toxic Sensor M20     2106B1518   Sensepoint ND 0-000 ppm Toxic Sensor M20     2106B1519   Sensepoint ND 0-000 ppm Toxic Sensor M20     2106B1510   Sensepoint ND 0-000 ppm Toxic Sensor M25     2106B1512   Sensepoint ND 0-000		
2106B1701   Sensepoint H <sub>2</sub> S 0-50 ppm Toxic Sensor ¾"NPT     2106B1402   Sensepoint CO 0-100 ppm Toxic Sensor ¾"NPT     2106B1405   Sensepoint CO 0-200 ppm Toxic Sensor M20     2106B1406   Sensepoint CO 0-200 ppm Toxic Sensor M20     2106B1407   Sensepoint CO 0-500 ppm Toxic Sensor M20     2106B1505   Sensepoint CO 0-500 ppm Toxic Sensor M25     2106B1506   Sensepoint CO 0-200 ppm Toxic Sensor M25     2106B1507   Sensepoint CO 0-500 ppm Toxic Sensor M25     2106B1507   Sensepoint CO 0-200 ppm Toxic Sensor ¾"NPT     2106B1706   Sensepoint CO 0-200 ppm Toxic Sensor ¾"NPT     2106B1707   Sensepoint CO 0-500 ppm Toxic Sensor ¾"NPT     2106B1410   Sensepoint CO 0-500 ppm Toxic Sensor M20     2106B1411   Sensepoint CI <sub>2</sub> 0-5 ppm Toxic Sensor M20     2106B1510   Sensepoint CI <sub>2</sub> 0-15 ppm Toxic Sensor M20     2106B1511   Sensepoint CI <sub>2</sub> 0-15 ppm Toxic Sensor M25     2106B1711   Sensepoint CI <sub>2</sub> 0-15 ppm Toxic Sensor M25     2106B1413   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1414   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1415   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1516   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1517   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1518   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1519   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20     2106B1510   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1511   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1512   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1513   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1514   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1715   Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25     2106B1716   Sensepoint N <sub>3</sub> 0-1000 ppm Toxic Sensor M20     2106B1517   Sensepoint N <sub>3</sub> 0-1000 ppm Toxic Sensor M20     2106B1518   Sensepoint N <sub>0</sub> 0-100 ppm Toxic Sensor M25     2106B1517   Sensepoint N <sub>0</sub> 0-100 ppm Toxic Sensor M25     2106B1518   Sensepoint N <sub>0</sub> 0-100 ppm Toxic Sensor M25     2106B152   Sensepoint N <sub>0</sub> 0-100 ppm		
2106B1702   Sensepoint H <sub>2</sub> S 0-100 ppm Toxic Sensor 34"NPT		. 2
2106B1405         Sensepoint CO 0-200 ppm Toxic Sensor M20           2106B1407         Sensepoint CO 0-200 ppm Toxic Sensor M20           2106B1505         Sensepoint CO 0-100 ppm Toxic Sensor M25           2106B1506         Sensepoint CO 0-100 ppm Toxic Sensor M25           2106B1507         Sensepoint CO 0-200 ppm Toxic Sensor M25           2106B1507         Sensepoint CO 0-100 ppm Toxic Sensor M25           2106B1706         Sensepoint CO 0-200 ppm Toxic Sensor W1PT           2106B1707         Sensepoint CO 0-200 ppm Toxic Sensor W1PT           2106B1707         Sensepoint CO 0-500 ppm Toxic Sensor W2D           2106B1410         Sensepoint CI, 0-5 ppm Toxic Sensor M2D           2106B1411         Sensepoint CI, 0-5 ppm Toxic Sensor M2D           2106B1510         Sensepoint CI, 0-15 ppm Toxic Sensor M25           2106B1511         Sensepoint CI, 0-15 ppm Toxic Sensor M25           2106B1711         Sensepoint NH, 0-50 ppm Toxic Sensor M20           2106B1713         Sensepoint NH, 0-50 ppm Toxic Sensor M20           2106B1414         Sensepoint NH, 0-100 ppm Toxic Sensor M20           2106B1513         Sensepoint NH, 0-50 ppm Toxic Sensor M25           2106B1513         Sensepoint NH, 0-100 ppm Toxic Sensor M25           2106B1514         Sensepoint NH, 0-100 ppm Toxic Sensor M25           2106B1515         Sensepoint NH, 0-		. 2
2106B1406         Sensepoint CO 0-200 ppm Toxic Sensor M20           2106B1505         Sensepoint CO 0-500 ppm Toxic Sensor M25           2106B1506         Sensepoint CO 0-200 ppm Toxic Sensor M25           2106B1507         Sensepoint CO 0-200 ppm Toxic Sensor M25           2106B1705         Sensepoint CO 0-500 ppm Toxic Sensor M25           2106B1706         Sensepoint CO 0-200 ppm Toxic Sensor ¾*NPT           2106B1707         Sensepoint CO 0-500 ppm Toxic Sensor M20           2106B1410         Sensepoint CO 0-500 ppm Toxic Sensor M20           2106B1411         Sensepoint CO 0-500 ppm Toxic Sensor M20           2106B1510         Sensepoint CO 0-500 ppm Toxic Sensor M20           2106B1511         Sensepoint CO 0-15 ppm Toxic Sensor M25           2106B1511         Sensepoint CO 0-15 ppm Toxic Sensor M25           2106B1413         Sensepoint NH <sub>0</sub> 0-15 ppm Toxic Sensor M20           2106B1413         Sensepoint NH <sub>0</sub> 0-100 ppm Toxic Sensor M20           2106B1513         Sensepoint NH <sub>0</sub> 0-100 ppm Toxic Sensor M20           2106B1514         Sensepoint NH <sub>0</sub> 0-100 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>0</sub> 0-100 ppm Toxic Sensor M25           2106B1516         Sensepoint NH <sub>0</sub> 0-100 ppm Toxic Sensor M25           2106B1517         Sensepoint NH <sub>0</sub> 0-100 ppm Toxic Sensor M25           2106B1518		
2106B1407   Sensepoint CO 0-500 ppm Toxic Sensor M20		
2106B1505   Sensepoint CO 0-100 ppm Toxic Sensor M25		
2106B1506 Sensepoint CO 0-200 ppm Toxic Sensor M25 2106B1507 Sensepoint CO 0-500 ppm Toxic Sensor M25 2106B1705 Sensepoint CO 0-100 ppm Toxic Sensor ¾*NPT 2106B1707 Sensepoint CO 0-500 ppm Toxic Sensor M20 2106B1411 Sensepoint CI₂ 0-15 ppm Toxic Sensor M20 2106B1510 Sensepoint CI₂ 0-15 ppm Toxic Sensor M25 2106B1511 Sensepoint CI₂ 0-15 ppm Toxic Sensor M25 2106B1511 Sensepoint CI₂ 0-15 ppm Toxic Sensor M25 2106B1711 Sensepoint CI₂ 0-15 ppm Toxic Sensor M25 2106B1413 Sensepoint NH₃ 0-50 ppm Toxic Sensor M20 2106B1414 Sensepoint NH₃ 0-1000 ppm Toxic Sensor M20 2106B1513 Sensepoint NH₃ 0-1000 ppm Toxic Sensor M20 2106B1514 Sensepoint NH₃ 0-1000 ppm Toxic Sensor M25 2106B1515 Sensepoint NH₃ 0-1000 ppm Toxic Sensor M25 2106B1515 Sensepoint NH₃ 0-1000 ppm Toxic Sensor M25 2106B1713 Sensepoint NH₃ 0-1000 ppm Toxic Sensor M25 2106B1714 Sensepoint NH₃ 0-1000 ppm Toxic Sensor M25 2106B1715 Sensepoint NH₃ 0-1000 ppm Toxic Sensor M27 2106B1714 Sensepoint NH₃ 0-1000 ppm Toxic Sensor ¾*NPT 2106B1715 Sensepoint NH₃ 0-1000 ppm Toxic Sensor ¾*NPT 2106B1416 Sensepoint H₂ 0-1000 ppm Toxic Sensor M20 2106B1517 Sensepoint H₂ 0-1000 ppm Toxic Sensor M20 2106B1518 Sensepoint H₂ 0-10000 ppm Toxic Sensor M20 2106B1517 Sensepoint H₂ 0-1000 ppm Toxic Sensor M25 2106B1718 Sensepoint NO 0-100 ppm Toxic Sensor M25 2106B1720 Sensepoint SO₂ 0-50 ppm Toxic Sensor M25 2106B1721 Sensepoint SO₂ 0-50 ppm Toxic Sensor M20 2106B1522 Sensepoint NO₂ 0-10 ppm Toxic Sensor M25 2106B1722 Sensepoint NO₂ 0-10 ppm Toxic Sensor M25 2106B1722 Sensepoint NO₂ 0-10 ppm Toxic Sensor M25 2106B1522 Sensepoint NO₂ 0-10 ppm Toxic Sensor M25 2106B1523 Sensepoin		
2106B1507 Sensepoint CO 0-500 ppm Toxic Sensor M25 2106B1706 Sensepoint CO 0-100 ppm Toxic Sensor ¾"NPT 2106B1707 Sensepoint CO 0-500 ppm Toxic Sensor ¾"NPT 2106B1410 Sensepoint CO 0-500 ppm Toxic Sensor ¾"NPT 2106B1411 Sensepoint CI₂ 0-5 ppm Toxic Sensor M20 2106B1510 Sensepoint CI₂ 0-15 ppm Toxic Sensor M25 2106B1511 Sensepoint CI₂ 0-15 ppm Toxic Sensor M25 2106B1511 Sensepoint CI₂ 0-15 ppm Toxic Sensor M25 2106B1413 Sensepoint NH₃ 0-50 ppm Toxic Sensor M20 2106B1413 Sensepoint NH₃ 0-100 ppm Toxic Sensor M20 2106B1414 Sensepoint NH₃ 0-1000 ppm Toxic Sensor M20 2106B1415 Sensepoint NH₃ 0-1000 ppm Toxic Sensor M20 2106B1513 Sensepoint NH₃ 0-1000 ppm Toxic Sensor M20 2106B1513 Sensepoint NH₃ 0-100 ppm Toxic Sensor M25 2106B1514 Sensepoint NH₃ 0-100 ppm Toxic Sensor M25 2106B1515 Sensepoint NH₃ 0-100 ppm Toxic Sensor M25 2106B1515 Sensepoint NH₃ 0-100 ppm Toxic Sensor M25 2106B1713 Sensepoint NH₃ 0-100 ppm Toxic Sensor M25 2106B1714 Sensepoint NH₃ 0-1000 ppm Toxic Sensor ¾"NPT 2106B1715 Sensepoint NH₃ 0-1000 ppm Toxic Sensor ¾"NPT 2106B1716 Sensepoint H₂ 0-1000 ppm Toxic Sensor M20 2106B1517 Sensepoint H₂ 0-1000 ppm Toxic Sensor M20 2106B1518 Sensepoint H₂ 0-1000 ppm Toxic Sensor M25 2106B1517 Sensepoint H₂ 0-1000 ppm Toxic Sensor M25 2106B1518 Sensepoint H₂ 0-1000 ppm Toxic Sensor M25 2106B1718 Sensepoint H₂ 0-1000 ppm Toxic Sensor M25 2106B1718 Sensepoint N0 0-100 ppm Toxic Sensor M25 2106B1518 Sensepoint N0 0-100 ppm Toxic Sensor M20 2106B1418 Sensepoint N0 0-100 ppm Toxic Sensor M20 2106B1518 Sensepoint N0 0-100 ppm Toxic Sensor M20 2106B1519 Sensepoint So₂ 0-50 ppm Toxic Sensor M20 2106B1520 Sensepoint So₂ 0-50 ppm Toxic Sensor M20 2106B1521 Sensepoint So₂ 0-50 ppm Toxic Sensor M20 2106B1522 Sensepoint No₂ 0-10 ppm Toxic Sensor M20 2106B1420 Sensepoint No₂ 0-10 ppm Toxic Sensor M20 2106B1420 Sensepoint No₂		
2106B1705   Sensepoint CO 0-100 ppm Toxic Sensor ¾"NPT		1 11
2106B1706         Sensepoint CO 0-200 ppm Toxic Sensor ¾"NPT           2106B1410         Sensepoint CO 0-500 ppm Toxic Sensor ¾"NPT           2106B1411         Sensepoint CI <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1510         Sensepoint CI <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1511         Sensepoint CI <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1511         Sensepoint CI <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1711         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M20           2106B1413         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M20           2106B1414         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20           2106B1513         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25           2106B1514         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1713         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1715         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor 34"NPT           2106B1716         Sensepoint H <sub>2</sub> 0-1000 ppm Toxic Sensor M20           2106B1715         Sensepoint H <sub>2</sub> 0-1000 ppm Toxic Sensor M20           2106B1416         Sensepoint H <sub>2</sub> 0-1000 ppm Toxic Sensor M20           2106B1517         Sensepoint H <sub>2</sub> 0-1000 ppm Toxic Sensor M20           2106B1518         Sensepoint H <sub>2</sub> 0-1000 ppm Toxic Sensor M25		
2106B1410         Sensepoint Cl <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1510         Sensepoint Cl <sub>2</sub> 0-5 ppm Toxic Sensor M25           2106B1511         Sensepoint Cl <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1511         Sensepoint Cl <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1711         Sensepoint Cl <sub>2</sub> 0-15 ppm Toxic Sensor M26           2106B1413         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M20           2106B1414         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1513         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1514         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1713         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor 34"NPT           2106B1714         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor 34"NPT           2106B1715         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1716         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1416         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1517         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1517         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1517         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1718         Sensepoint M0 0-100 ppm Toxic Sensor M25	2106B1706	Sensepoint CO 0-200 ppm Toxic Sensor ¾"NPT
2106B1411         Sensepoint Cl <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1510         Sensepoint Cl <sub>2</sub> 0-5 ppm Toxic Sensor M25           2106B1511         Sensepoint Cl <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1711         Sensepoint Cl <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1413         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M20           2106B1414         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1513         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25           2106B1513         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25           2106B1514         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25           2106B1713         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25           2106B1714         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor 34"NPT           2106B1715         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1716         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1516         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1517         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1718         Sensepoint N0 0-100 ppm Toxic Sensor M25           2106B1718         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint N0 0-100 ppm Toxic Sensor M25           <	2106B1707	Sensepoint CO 0-500 ppm Toxic Sensor ¾"NPT
2106B1510         Sensepoint Ol <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1511         Sensepoint Ol <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1711         Sensepoint Ol <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1413         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M20           2106B1414         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1513         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M25           2106B1514         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25           2106B1713         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M25           2106B1714         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor 34"NPT           2106B1715         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor 34"NPT           2106B1716         Sensepoint H <sub>2</sub> 0-1000 ppm Toxic Sensor M20           2106B1416         Sensepoint H <sub>2</sub> 0-1000 ppm Toxic Sensor M20           2106B1516         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1517         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1718         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1717         Sensepoint M 0 0-100 ppm Toxic Sensor M20           2106B1718         Sensepoint NO 0-100 ppm Toxic Sensor M20           2106B1718         Sensepoint NO 0-100 ppm Toxic Sensor M20	2106B1410	
2106B1511         Sensepoint Ol <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1711         Sensepoint Ol <sub>2</sub> 0-15 ppm Toxic Sensor 34"NPT           2106B1413         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M20           2106B1414         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1513         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M25           2106B1514         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25           2106B1713         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor 34"NPT           2106B1714         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor 34"NPT           2106B1715         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1416         Sensepoint H <sub>2</sub> 0-1000 ppm Toxic Sensor M20           2106B1417         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1516         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1517         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1718         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1717         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1520         Sensepoint S0 <sub>2</sub> 0-15 ppm Toxic Sensor M20 <tr< td=""><td></td><td></td></tr<>		
2106B1711         Sensepoint Cl <sub>2</sub> 0-15 ppm Toxic Sensor ¾"NPT           2106B1413         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M20           2106B1414         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1513         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M25           2106B1514         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1713         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor ¾"NPT           2106B1714         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor ¾"NPT           2106B1715         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1416         Sensepoint H <sub>2</sub> 0-1000 ppm Toxic Sensor M20           2106B1417         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1516         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1517         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1716         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1717         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M4"NPT           2106B1418         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1520         Sensepoint S0 <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1521         Sensepoint S0 <sub>2</sub> 0-50 ppm Toxic Sensor M25		
2106B1413         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M20           2106B1414         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1513         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M25           2106B1514         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1713         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor ¾"NPT           2106B1714         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor ¾"NPT           2106B1715         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1416         Sensepoint H <sub>2</sub> 0-1000 ppm Toxic Sensor M20           2106B1417         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1516         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1517         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1716         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1717         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1718         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1520         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1421         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1521         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor M25 <tr< td=""><td></td><td></td></tr<>		
2106B1414         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1513         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M25           2106B1514         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1713         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor 34"NPT           2106B1714         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor 34"NPT           2106B1715         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1416         Sensepoint H <sub>2</sub> 0-1000 ppm Toxic Sensor M20           2106B1417         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1516         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1517         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1716         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor 34"NPT           2106B1717         Sensepoint M0 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint N0 0-100 ppm Toxic Sensor M25           2106B1420         Sensepoint N0 0-100 ppm Toxic Sensor M25           2106B1421         Sensepoint S0 <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1520         Sensepoint S0 <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1521         Sensepoint S0 <sub>2</sub> 0-50 ppm Toxic Sensor M25		
2106B1415         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M20           2106B1513         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M25           2106B1514         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>3</sub> 0-100 ppm Toxic Sensor M25           2106B1713         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor ¾"NPT           2106B1714         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor ¾"NPT           2106B1715         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1416         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1417         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1516         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1716         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1717         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1718         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1718         Sensepoint N0 0-100 ppm Toxic Sensor M25           2106B1420         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1521         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor M20           2106B1521         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1521         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M25		
2106B1513         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor M25           2106B1514         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1713         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor ¾"NPT           2106B1714         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor ¾"NPT           2106B1715         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1416         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1516         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1517         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1716         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1717         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M26           2106B1718         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint N0 0-100 ppm Toxic Sensor M20           2106B1718         Sensepoint N0 0-100 ppm Toxic Sensor M25           2106B1718         Sensepoint N0 0-100 ppm Toxic Sensor M25           2106B1720         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1421         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor M20           2106B1521         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1721         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor M25		
2106B1514         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1515         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M25           2106B1713         Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor ¾"NPT           2106B1714         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor ¾"NPT           2106B1715         Sensepoint NH <sub>3</sub> 0-1000 ppm Toxic Sensor M20           2106B1416         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1417         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1516         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1517         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1716         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M25           2106B1717         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor M20           2106B1818         Sensepoint NO 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint NO 0-100 ppm Toxic Sensor M20           2106B1718         Sensepoint NO 0-100 ppm Toxic Sensor M20           2106B1420         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1521         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor M25           2106B1521         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1721         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor M25           2106B1721         Sensepoint SO <sub>2</sub> 0-10 ppm Toxic Sensor M20		
2106B1515 Sensepoint NH $_3$ 0-100 ppm Toxic Sensor M25 2106B1713 Sensepoint NH $_3$ 0-50 ppm Toxic Sensor $34$ "NPT 2106B1714 Sensepoint NH $_3$ 0-1000 ppm Toxic Sensor $34$ "NPT 2106B1715 Sensepoint NH $_3$ 0-1000 ppm Toxic Sensor $34$ "NPT 2106B1416 Sensepoint H $_2$ 0-1000 ppm Toxic Sensor M20 2106B1417 Sensepoint H $_2$ 0-1000 ppm Toxic Sensor M20 2106B1516 Sensepoint H $_2$ 0-1000 ppm Toxic Sensor M25 2106B1517 Sensepoint H $_2$ 0-10000 ppm Toxic Sensor M25 2106B1716 Sensepoint H $_2$ 0-10000 ppm Toxic Sensor M25 2106B1717 Sensepoint H $_2$ 0-10000 ppm Toxic Sensor $34$ "NPT 2106B1717 Sensepoint N0 0-1000 ppm Toxic Sensor M20 2106B1518 Sensepoint N0 0-100 ppm Toxic Sensor M20 2106B1518 Sensepoint N0 0-100 ppm Toxic Sensor M25 2106B1718 Sensepoint N0 0-100 ppm Toxic Sensor M20 2106B1421 Sensepoint S0 $_2$ 0-15 ppm Toxic Sensor M20 2106B1520 Sensepoint S0 $_2$ 0-15 ppm Toxic Sensor M25 2106B1720 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M25 2106B1721 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M25 2106B1721 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M25 2106B1721 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20 2106B1522 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M25 2106B1721 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20 2106B1522 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20 2106B1523 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20 2106B1724 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20 2106B1725 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20 2106B1726 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20 2106B1727 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20 2106B1728 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20 2106B1729 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20 2106B1720 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20 2106B1720 Sensepoint N0 $_2$ 0-10 ppm Toxic Sensor M20		
2106B1714         Sensepoint $NH_3^{''}$ 0-1000 ppm Toxic Sensor ¾"NPT           2106B1715         Sensepoint $NH_3^{''}$ 0-1000 ppm Toxic Sensor ¾"NPT           2106B1416         Sensepoint $H_2^{''}$ 0-1000 ppm Toxic Sensor M20           2106B1417         Sensepoint $H_2^{''}$ 0-1000 ppm Toxic Sensor M25           2106B1516         Sensepoint $H_2^{''}$ 0-10000 ppm Toxic Sensor M25           2106B1517         Sensepoint $H_2^{''}$ 0-10000 ppm Toxic Sensor M25           2106B1716         Sensepoint $H_2^{''}$ 0-10000 ppm Toxic Sensor ¾"NPT           2106B1717         Sensepoint $H_2^{''}$ 0-10000 ppm Toxic Sensor M20           2106B1418         Sensepoint NO 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint NO 0-100 ppm Toxic Sensor M25           2106B1718         Sensepoint NO 0-100 ppm Toxic Sensor M25           2106B1420         Sensepoint SO $_2^{''}$ 0-15 ppm Toxic Sensor M20           2106B1421         Sensepoint SO $_2^{''}$ 0-15 ppm Toxic Sensor M20           2106B1520         Sensepoint SO $_2^{''}$ 0-15 ppm Toxic Sensor M25           2106B1521         Sensepoint SO $_2^{''}$ 0-15 ppm Toxic Sensor M25           2106B1721         Sensepoint SO $_2^{''}$ 0-10 ppm Toxic Sensor M20           2106B1721         Sensepoint NO $_2^{''}$ 0-10 ppm Toxic Sensor M20           2106B1522         Sensepoint NO $_2^{''}$ 0-10 ppm Toxic Sensor M20           2106B1522<	2106B1515	
2106B1715 Sensepoint NH $_3$ 0-100 ppm Toxic Sensor %"NPT 2106B1416 Sensepoint H $_2$ 0-1000 ppm Toxic Sensor M20 2106B1516 Sensepoint H $_2$ 0-1000 ppm Toxic Sensor M25 2106B1517 Sensepoint H $_2$ 0-1000 ppm Toxic Sensor M25 2106B1716 Sensepoint H $_2$ 0-1000 ppm Toxic Sensor M25 2106B1717 Sensepoint H $_2$ 0-1000 ppm Toxic Sensor $3$ "NPT 2106B1717 Sensepoint H $_2$ 0-10000 ppm Toxic Sensor $3$ "NPT 2106B1418 Sensepoint NO 0-100 ppm Toxic Sensor M20 2106B1518 Sensepoint NO 0-100 ppm Toxic Sensor M25 2106B1718 Sensepoint NO 0-100 ppm Toxic Sensor M25 2106B1420 Sensepoint NO 0-100 ppm Toxic Sensor M20 2106B1421 Sensepoint SO $_2$ 0-15 ppm Toxic Sensor M20 2106B1520 Sensepoint SO $_2$ 0-15 ppm Toxic Sensor M25 2106B1521 Sensepoint SO $_2$ 0-15 ppm Toxic Sensor M25 2106B1720 Sensepoint SO $_2$ 0-15 ppm Toxic Sensor M25 2106B1721 Sensepoint SO $_2$ 0-15 ppm Toxic Sensor M25 2106B1721 Sensepoint SO $_2$ 0-10 ppm Toxic Sensor M25 2106B1721 Sensepoint SO $_2$ 0-10 ppm Toxic Sensor M20 2106B1721 Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20 2106B1721 Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20 2106B1522 Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20 2106B1721 Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20 2106B1722 Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20 2106B1722 Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20 2106B1722 Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M25 2106B1722 Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M25 2106B1722 Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20 2106B1722 Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20 2106B1722 Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20	2106B1713	Sensepoint NH <sub>3</sub> 0-50 ppm Toxic Sensor ¾"NPT
2106B1416       Sensepoint $H_2$ 0-1000 ppm Toxic Sensor M20         2106B1417       Sensepoint $H_2$ 0-10000 ppm Toxic Sensor M20         2106B1516       Sensepoint $H_2$ 0-10000 ppm Toxic Sensor M25         2106B1517       Sensepoint $H_2$ 0-10000 ppm Toxic Sensor M25         2106B1716       Sensepoint $H_2$ 0-10000 ppm Toxic Sensor ¾"NPT         2106B1717       Sensepoint $H_2$ 0-10000 ppm Toxic Sensor ¾"NPT         2106B1418       Sensepoint NO 0-100 ppm Toxic Sensor M20         2106B1518       Sensepoint NO 0-100 ppm Toxic Sensor M25         2106B1718       Sensepoint NO 0-100 ppm Toxic Sensor M25         2106B1420       Sensepoint SO $_2$ 0-15 ppm Toxic Sensor M20         2106B1421       Sensepoint SO $_2$ 0-50 ppm Toxic Sensor M20         2106B1520       Sensepoint SO $_2$ 0-15 ppm Toxic Sensor M25         2106B1521       Sensepoint SO $_2$ 0-15 ppm Toxic Sensor M25         2106B1720       Sensepoint SO $_2$ 0-15 ppm Toxic Sensor M26         2106B1721       Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20         2106B1522       Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20         2106B1522       Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M20         2106B1522       Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M25         2106B1722       Sensepoint NO $_2$ 0-10 ppm Toxic Sensor M25         2106B1423       Sensepoint NO $_2$ 0-10 ppm	2106B1714	
2106B1417       Sensepoint $H_2^-$ 0-10000 ppm Toxic Sensor M20         2106B1516       Sensepoint $H_2^-$ 0-1000 ppm Toxic Sensor M25         2106B1517       Sensepoint $H_2^-$ 0-10000 ppm Toxic Sensor M25         2106B1716       Sensepoint $H_2^-$ 0-10000 ppm Toxic Sensor ¾"NPT         2106B1717       Sensepoint $H_2^-$ 0-10000 ppm Toxic Sensor ¾"NPT         2106B1418       Sensepoint NO 0-100 ppm Toxic Sensor M20         2106B1518       Sensepoint NO 0-100 ppm Toxic Sensor M25         2106B1718       Sensepoint NO 0-100 ppm Toxic Sensor M25         2106B1420       Sensepoint S02 0-15 ppm Toxic Sensor M20         2106B1421       Sensepoint S02 0-50 ppm Toxic Sensor M20         2106B1520       Sensepoint S02 0-15 ppm Toxic Sensor M25         2106B1521       Sensepoint S02 0-15 ppm Toxic Sensor M25         2106B1720       Sensepoint S02 0-15 ppm Toxic Sensor M25         2106B1721       Sensepoint N02 0-10 ppm Toxic Sensor M20         2106B1522       Sensepoint N02 0-10 ppm Toxic Sensor M25         2106B1722       Sensepoint N02 0-10 ppm Toxic Sensor M25         2106B1723       Sensepoint N02 0-10 ppm Toxic Sensor M20     <		
2106B1516         Sensepoint $H_2^-$ 0-1000 ppm Toxic Sensor M25           2106B1517         Sensepoint $H_2^-$ 0-10000 ppm Toxic Sensor M25           2106B1716         Sensepoint $H_2^-$ 0-1000 ppm Toxic Sensor 34"NPT           2106B1717         Sensepoint $H_2^-$ 0-10000 ppm Toxic Sensor 34"NPT           2106B1418         Sensepoint NO 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint NO 0-100 ppm Toxic Sensor M25           2106B1718         Sensepoint NO 0-100 ppm Toxic Sensor M25           2106B1420         Sensepoint S02 0-15 ppm Toxic Sensor M20           2106B1421         Sensepoint S02 0-50 ppm Toxic Sensor M20           2106B1520         Sensepoint S02 0-15 ppm Toxic Sensor M25           2106B1521         Sensepoint S02 0-50 ppm Toxic Sensor M25           2106B1720         Sensepoint S02 0-15 ppm Toxic Sensor M25           2106B1721         Sensepoint S02 0-15 ppm Toxic Sensor M20           2106B1721         Sensepoint N02 0-10 ppm Toxic Sensor M20           2106B1522         Sensepoint N02 0-10 ppm Toxic Sensor M20           2106B1522         Sensepoint N02 0-10 ppm Toxic Sensor M25           2106B1722         Sensepoint N02 0-10 ppm Toxic Sensor M25           2106B1723         Sensepoint N02 0-10 ppm Toxic Sensor M20		
2106B1517 Sensepoint $H_2$ 0-10000 ppm Toxic Sensor M25 2106B1716 Sensepoint $H_2$ 0-10000 ppm Toxic Sensor $34$ "NPT 2106B1717 Sensepoint $H_2$ 0-10000 ppm Toxic Sensor $34$ "NPT 2106B1418 Sensepoint NO 0-100 ppm Toxic Sensor M20 2106B1518 Sensepoint NO 0-100 ppm Toxic Sensor M25 2106B1718 Sensepoint NO 0-100 ppm Toxic Sensor M25 2106B1420 Sensepoint $SO_2$ 0-15 ppm Toxic Sensor M20 2106B1421 Sensepoint $SO_2$ 0-50 ppm Toxic Sensor M20 2106B1520 Sensepoint $SO_2$ 0-15 ppm Toxic Sensor M25 2106B1521 Sensepoint $SO_2$ 0-15 ppm Toxic Sensor M25 2106B1720 Sensepoint $SO_2$ 0-15 ppm Toxic Sensor M25 2106B1721 Sensepoint $SO_2$ 0-15 ppm Toxic Sensor $SV$ NPT 2106B1721 Sensepoint $SV$ 0-10 ppm Toxic Sensor M20 2106B1522 Sensepoint $SV$ 0-10 ppm Toxic Sensor M20 2106B1522 Sensepoint $SV$ 0-10 ppm Toxic Sensor M20 2106B1522 Sensepoint $SV$ 0-10 ppm Toxic Sensor M20 2106B1722 Sensepoint $SV$ 0-10 ppm Toxic Sensor M25 2106B1722 Sensepoint $SV$ 0-10 ppm Toxic Sensor M25 2106B1723 Sensepoint $SV$ 0-10 ppm Toxic Sensor M25 2106B1724 Sensepoint $SV$ 0-10 ppm Toxic Sensor M25 2106B1725 Sensepoint $SV$ 0-10 ppm Toxic Sensor M25 2106B1726 Sensepoint $SV$ 0-10 ppm Toxic Sensor M25 2106B1727 Sensepoint $SV$ 0-10 ppm Toxic Sensor M25 2106B1728 Sensepoint $SV$ 0-10 ppm Toxic Sensor M25 2106B1729 Sensepoint $SV$ 0-10 ppm Toxic Sensor M20		
2106B1716 Sensepoint $H_2^-$ 0-1000 ppm Toxic Sensor $34$ "NPT 2106B1717 Sensepoint $H_2^-$ 0-10000 ppm Toxic Sensor $34$ "NPT 2106B1418 Sensepoint NO 0-100 ppm Toxic Sensor M20 2106B1518 Sensepoint NO 0-100 ppm Toxic Sensor M25 2106B1718 Sensepoint NO 0-100 ppm Toxic Sensor M25 2106B1420 Sensepoint $SO_2^-$ 0-15 ppm Toxic Sensor M20 2106B1421 Sensepoint $SO_2^-$ 0-50 ppm Toxic Sensor M20 2106B1520 Sensepoint $SO_2^-$ 0-15 ppm Toxic Sensor M25 2106B1521 Sensepoint $SO_2^-$ 0-50 ppm Toxic Sensor M25 2106B1720 Sensepoint $SO_2^-$ 0-15 ppm Toxic Sensor M25 2106B1721 Sensepoint $SO_2^-$ 0-15 ppm Toxic Sensor $SV^-$ NPT 2106B1721 Sensepoint $SO_2^-$ 0-10 ppm Toxic Sensor M20 2106B1522 Sensepoint $SO_2^-$ 0-10 ppm Toxic Sensor M20 2106B1522 Sensepoint $SO_2^-$ 0-10 ppm Toxic Sensor M25 2106B1722 Sensepoint $SO_2^-$ 0-10 ppm Toxic Sensor M25 2106B1723 Sensepoint $SO_2^-$ 0-10 ppm Toxic Sensor M25 2106B1724 Sensepoint $SO_2^-$ 0-10 ppm Toxic Sensor M25 2106B1725 Sensepoint $SO_2^-$ 0-10 ppm Toxic Sensor M25 2106B1725 Sensepoint $SO_2^-$ 0-10 ppm Toxic Sensor M25 2106B1725 Sensepoint $SO_2^-$ 0-10 ppm Toxic Sensor M20 2106B1725 Sensepoint $SO_2^-$ 0-10 ppm Toxic Sensor M20		
2106B1717         Sensepoint H <sub>2</sub> 0-10000 ppm Toxic Sensor ¾"NPT           2106B1418         Sensepoint NO 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint NO 0-100 ppm Toxic Sensor M25           2106B1718         Sensepoint NO 0-100 ppm Toxic Sensor M25           2106B1420         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1421         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor M20           2106B1520         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1521         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor M25           2106B1720         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor ¾"NPT           2106B1721         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor ¾"NPT           2106B1422         Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor M20           2106B1522         Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor M25           2106B1722         Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor M25           2106B1722         Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor M25           2106B1430         Sensepoint NO <sub>2</sub> 25% V/V Toxic Sensor M20		
2106B1418         Sensepoint NO 0-100 ppm Toxic Sensor M20           2106B1518         Sensepoint NO 0-100 ppm Toxic Sensor M25           2106B1718         Sensepoint NO 0-100 ppm Toxic Sensor M25           2106B1420         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M20           2106B1421         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor M20           2106B1520         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M25           2106B1521         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor M25           2106B1720         Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor 34"NPT           2106B1721         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor 34"NPT           2106B1422         Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor M20           2106B1522         Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor M25           2106B1722         Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor M25           2106B1430         Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor M20		
2106B1518         Sensepoint NO 0-100 ppm Toxic Sensor M25           2106B1718         Sensepoint NO 0-100 ppm Toxic Sensor ¾"NPT           2106B1420         Sensepoint SO₂ 0-15 ppm Toxic Sensor M20           2106B1421         Sensepoint SO₂ 0-50 ppm Toxic Sensor M20           2106B1520         Sensepoint SO₂ 0-15 ppm Toxic Sensor M25           2106B1521         Sensepoint SO₂ 0-50 ppm Toxic Sensor M25           2106B1720         Sensepoint SO₂ 0-15 ppm Toxic Sensor ¾"NPT           2106B1721         Sensepoint SO₂ 0-50 ppm Toxic Sensor ¾"NPT           2106B1422         Sensepoint NO₂ 0-10 ppm Toxic Sensor M20           2106B1522         Sensepoint NO₂ 0-10 ppm Toxic Sensor M25           2106B1722         Sensepoint NO₂ 0-10 ppm Toxic Sensor M25           2106B1430         Sensepoint O₂ 25% V/V Toxic Sensor M20		
2106B1718         Sensepoint NO 0-100 ppm Toxic Sensor ¾"NPT           2106B1420         Sensepoint SO₂ 0-15 ppm Toxic Sensor M20           2106B1421         Sensepoint SO₂ 0-50 ppm Toxic Sensor M20           2106B1520         Sensepoint SO₂ 0-15 ppm Toxic Sensor M25           2106B1521         Sensepoint SO₂ 0-50 ppm Toxic Sensor M25           2106B1720         Sensepoint SO₂ 0-15 ppm Toxic Sensor ¾"NPT           2106B1721         Sensepoint SO₂ 0-50 ppm Toxic Sensor ¾"NPT           2106B1422         Sensepoint NO₂ 0-10 ppm Toxic Sensor M20           2106B1522         Sensepoint NO₂ 0-10 ppm Toxic Sensor M25           2106B1722         Sensepoint NO₂ 0-10 ppm Toxic Sensor M25           2106B1430         Sensepoint O₂ 25% V/V Toxic Sensor M20		
2106B1420 Sensepoint $SO_2$ 0-15 ppm Toxic Sensor M20 2106B1421 Sensepoint $SO_2$ 0-50 ppm Toxic Sensor M20 2106B1520 Sensepoint $SO_2$ 0-15 ppm Toxic Sensor M25 2106B1521 Sensepoint $SO_2$ 0-50 ppm Toxic Sensor M25 2106B1720 Sensepoint $SO_2$ 0-15 ppm Toxic Sensor M25 2106B1721 Sensepoint $SO_2$ 0-15 ppm Toxic Sensor $9$ "NPT 2106B1721 Sensepoint $9$ 0-10 ppm Toxic Sensor $9$ 0-10 2106B1422 Sensepoint $9$ 0-10 ppm Toxic Sensor M20 2106B1522 Sensepoint $9$ 0-10 ppm Toxic Sensor M25 2106B1722 Sensepoint $9$ 0-10 ppm Toxic Sensor $9$ 0-10 2106B1430 Sensepoint $9$ 0-25% V/V Toxic Sensor M20		
2106B1421         Sensepoint SO₂ 0-50 ppm Toxic Sensor M20           2106B1520         Sensepoint SO₂ 0-15 ppm Toxic Sensor M25           2106B1521         Sensepoint SO₂ 0-50 ppm Toxic Sensor M25           2106B1720         Sensepoint SO₂ 0-15 ppm Toxic Sensor ¾"NPT           2106B1721         Sensepoint SO₂ 0-50 ppm Toxic Sensor ¾"NPT           2106B1422         Sensepoint NO₂ 0-10 ppm Toxic Sensor M20           2106B1522         Sensepoint NO₂ 0-10 ppm Toxic Sensor M25           2106B1722         Sensepoint NO₂ 0-10 ppm Toxic Sensor ¾"NPT           2106B1430         Sensepoint O₂ 25% V/V Toxic Sensor M20		Sensepoint SO <sub>2</sub> 0-15 ppm Toxic Sensor M20
2106B1521         Sensepoint SO₂ 0-50 ppm Toxic Sensor M25           2106B1720         Sensepoint SO₂ 0-15 ppm Toxic Sensor ¾"NPT           2106B1721         Sensepoint SO₂ 0-50 ppm Toxic Sensor ¾"NPT           2106B1422         Sensepoint NO₂ 0-10 ppm Toxic Sensor M20           2106B1522         Sensepoint NO₂ 0-10 ppm Toxic Sensor M25           2106B1722         Sensepoint NO₂ 0-10 ppm Toxic Sensor ¾"NPT           2106B1430         Sensepoint O₂ 25% V/V Toxic Sensor M20	2106B1421	Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor M20
2106B1720         Sensepoint SO₂ 0-15 ppm Toxic Sensor ¾"NPT           2106B1721         Sensepoint SO₂ 0-50 ppm Toxic Sensor ¾"NPT           2106B1422         Sensepoint NO₂ 0-10 ppm Toxic Sensor M20           2106B1522         Sensepoint NO₂ 0-10 ppm Toxic Sensor M25           2106B1722         Sensepoint NO₂ 0-10 ppm Toxic Sensor ¾"NPT           2106B1430         Sensepoint O₂ 25% V/V Toxic Sensor M20		
2106B1721         Sensepoint SO <sub>2</sub> 0-50 ppm Toxic Sensor ¾"NPT           2106B1422         Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor M20           2106B1522         Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor M25           2106B1722         Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor ¾"NPT           2106B1430         Sensepoint O <sub>2</sub> 25% V/V Toxic Sensor M20		
2106B1422       Sensepoint NO₂ 0-10 ppm Toxic Sensor M20         2106B1522       Sensepoint NO₂ 0-10 ppm Toxic Sensor M25         2106B1722       Sensepoint NO₂ 0-10 ppm Toxic Sensor ¾"NPT         2106B1430       Sensepoint O₂ 25% V/V Toxic Sensor M20		
2106B1522       Sensepoint NO₂ 0-10 ppm Toxic Sensor M25         2106B1722       Sensepoint NO₂ 0-10 ppm Toxic Sensor ¾"NPT         2106B1430       Sensepoint O₂ 25% V/V Toxic Sensor M20		
2106B1722 Sensepoint NO <sub>2</sub> 0-10 ppm Toxic Sensor ¾"NPT 2106B1430 Sensepoint 0 <sub>2</sub> 25% V/V Toxic Sensor M20		
2106B1430 Sensepoint 0, 25% V/V Toxic Sensor M20		
Z TOOD TOOD SENSEDUILL OF SOM ALV TOXIC SENSOI INSO	2106B1530	Sensepoint 0 <sub>2</sub> 25% V/V Toxic Sensor M25
2106B1730 Sensepoint 0, 25% V/V Toxic Sensor ¾"NPT		
r.		

