

Specification sheet

EL 4

Conductive multiple rod electrode



Application area

The multiple rod electrode EL 4 is a universal level switch for conductive liquids. The instrument is ideal as overflow and dry run protection in conjunction with VEGATOR 256C and VEGATOR 632 signal conditioning instruments.

Your benefit

- Reliable pump control through multiple rod probe
- High flexibility in use through shortenable rod probes
- Reduced stockkeeping through exchangeable rod probes

Function

The instruments are used for level detection in conductive liquids. A VEGATOR 131, 132, 256 C or 632 is required for operation of the conductive probe. When the probe is immersed, a slight alternating current flows and is detected, evaluated and converted into a switching command by the signal conditioning instrument. The switching point is determined via the mounting position or the length of the respective probe.

Technical data

Probe length	up to 4 m (13.12 ft)
Conductance of the medium	min. 7.5 μ S/cm
Process fitting	Thread G1½
Process pressure	-1 ... +6 bar/-100 ... +600 kPa (-14.5 ... +87 psig)
Process temperature	-20 ... +100 °C (-4 ... +212 °F)
Ambient, storage and transport temperature	-40 ... +80 °C (-40 ... +176 °F)
Voltage supply	Via the connected signal conditioning instrument

Materials

The wetted parts of the instrument are made of PP. The rods of the probe are made of stainless steel.

You will find a complete overview of the available materials and seals in the "configurator" on our homepage at www.vega.com/configurator.

Housing versions

The housing is made of plastic (PP).

It is available with protection rating up to IP 66/IP 67.


Electronics versions

The probe is operated with external processing. The connected signal conditioning instrument powers the probe and provides a switching signal.

Adjustment

You can find the setup procedure for EL 4 in the operating instructions manual of the corresponding signal conditioning instrument.

Electrical connection

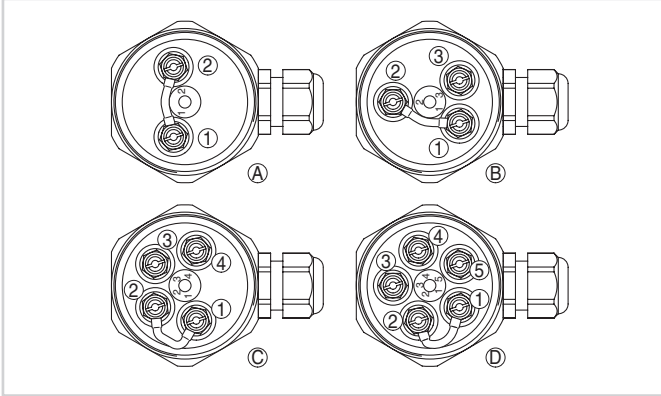


Connection compartment of the probe - 220 k Ω resistance between terminals 1 and 2

- 1 Connection terminal 1 = longest probe
- 2 Connection terminal 2 = shortest probe
- A Probe with 2 measuring electrodes
- B Probe with 3 measuring electrodes
- C Probe with 4 measuring electrodes
- D Probe with 5 measuring electrodes

You can find details on electrical connection in the instrument operating instructions on our homepage at www.vega.com/downloads.

Dimensions

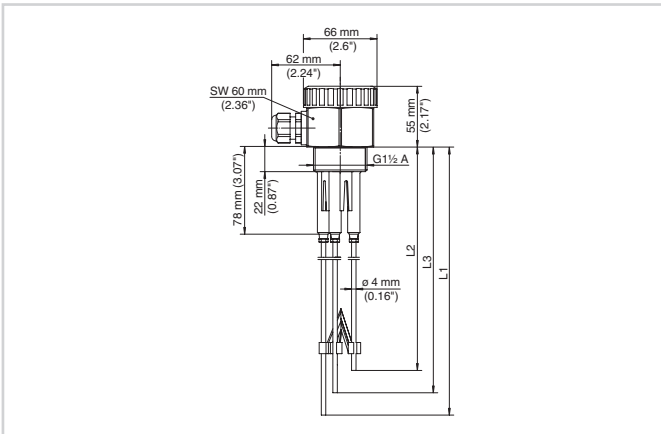

Conductive probe EL 4

L1-3 Probe length