

Operating Instructions

Double channel signal conditioning
instrument for level detection for 8/16 mA
sensors

VEGATOR 122



Document ID: 46108



VEGA

Contents

1	About this document	4
1.1	Function	4
1.2	Target group	4
1.3	Symbols used	4
2	For your safety	5
2.1	Authorised personnel	5
2.2	Appropriate use	5
2.3	Warning about incorrect use	5
2.4	General safety instructions	5
2.5	EU conformity	6
2.6	Safety label on the instrument	6
2.7	SIL conformity (optional)	6
2.8	Installation and operation in the USA and Canada	6
2.9	Safety instructions for Ex areas	6
2.10	Environmental instructions	6
3	Product description	7
3.1	Configuration	7
3.2	Principle of operation	7
3.3	Adjustment	8
3.4	Packaging, transport and storage	8
4	Mounting	9
4.1	Mounting instructions	9
5	Connecting to power supply	10
5.1	Preparing the connection	10
5.2	Connection procedure	11
5.3	Wiring plan	12
6	Setup	13
6.1	Adjustment system	13
6.2	Adjustment elements	13
6.3	Function table "Point level"	16
6.4	Function table, two-point control	17
7	Maintenance and fault rectification	19
7.1	Maintenance	19
7.2	Rectify faults	19
7.3	How to proceed if a repair is necessary	20
8	Dismount	21
8.1	Dismounting steps	21
8.2	Disposal	21
9	Supplement	22
9.1	Technical data	22
9.2	Dimensions	24
9.3	Industrial property rights	25
9.4	Trademark	25

Supplementary documentation**Information:**

Supplementary documents appropriate to the ordered version come with the delivery. You can find them listed in chapter "*Product description*".

Editing status: 2017-09-04

1 About this document

1.1 Function

This operating instructions manual provides all the information you need for mounting, connection and setup of the instrument. Furthermore there are important instructions for maintenance, fault rectification, the exchange of parts and the safety of the user. Please read this information before putting the instrument into operation and keep this manual accessible in the immediate vicinity of the device.

1.2 Target group

This operating instructions manual is directed to trained specialist personnel. The contents of this manual should be made available to these personnel and put into practice by them.

1.3 Symbols used



Information, tip, note

This symbol indicates helpful additional information.



Caution: If this warning is ignored, faults or malfunctions can result.



Warning: If this warning is ignored, injury to persons and/or serious damage to the instrument can result.



Danger: If this warning is ignored, serious injury to persons and/or destruction of the instrument can result.



Ex applications

This symbol indicates special instructions for Ex applications.



SIL applications

This symbol indicates instructions for functional safety which must be taken into account particularly for safety-relevant applications.

• List

The dot set in front indicates a list with no implied sequence.



Action

This arrow indicates a single action.

1

Sequence of actions

Numbers set in front indicate successive steps in a procedure.



Battery disposal

This symbol indicates special information about the disposal of batteries and accumulators.

2 For your safety

2.1 Authorised personnel

All operations described in this operating instructions manual must be carried out only by trained specialist personnel authorised by the plant operator.

During work on and with the device the required personal protective equipment must always be worn.

2.2 Appropriate use

VEGATOR 122 is a universal signal conditioning instrument for connection of level switches.

You can find detailed information about the area of application in chapter "*Product description*".

Operational reliability is ensured only if the instrument is properly used according to the specifications in the operating instructions manual as well as possible supplementary instructions.

For safety and warranty reasons, any invasive work on the device beyond that described in the operating instructions manual may be carried out only by personnel authorised by the manufacturer. Arbitrary conversions or modifications are explicitly forbidden.

2.3 Warning about incorrect use

Inappropriate or incorrect use of the instrument can give rise to application-specific hazards, e.g. vessel overfill or damage to system components through incorrect mounting or adjustment. Thus damage to property, to persons or environmental contamination can be caused. Also the protective characteristics of the instrument can be influenced.

2.4 General safety instructions

This is a state-of-the-art instrument complying with all prevailing regulations and directives. The instrument must only be operated in a technically flawless and reliable condition. The operator is responsible for the trouble-free operation of the instrument. When measuring aggressive or corrosive media that can cause a dangerous situation if the instrument malfunctions, the operator has to implement suitable measures to make sure the instrument is functioning properly.

During the entire duration of use, the user is obliged to determine the compliance of the necessary occupational safety measures with the current valid rules and regulations and also take note of new regulations.

The safety instructions in this operating instructions manual, the national installation standards as well as the valid safety regulations and accident prevention rules must be observed by the user.

For safety and warranty reasons, any invasive work on the device beyond that described in the operating instructions manual may be carried out only by personnel authorised by the manufacturer. Arbitrary

rary conversions or modifications are explicitly forbidden. For safety reasons, only the accessory specified by the manufacturer must be used.

To avoid any danger, the safety approval markings and safety tips on the device must also be observed and their meaning looked up in this operating instructions manual.

2.5 EU conformity

The device fulfils the legal requirements of the applicable EU directives. By affixing the CE marking, we confirm the conformity of the instrument with these directives.

You can find the EU conformity declaration on our website under www.vega.com/downloads.

2.6 Safety label on the instrument

The safety approval markings and safety tips on the device must be observed.

2.7 SIL conformity (optional)

Instruments with SIL option fulfill the requirements of functional safety according to IEC 61508. You can find further information in the supplied Safety Manual.

2.8 Installation and operation in the USA and Canada

This information is only valid for USA and Canada. Hence the following text is only available in the English language.

Installations in the US shall comply with the relevant requirements of the National Electrical Code (ANSI/NFPA 70).

Installations in Canada shall comply with the relevant requirements of the Canadian Electrical Code

2.9 Safety instructions for Ex areas

Please note the Ex-specific safety information for installation and operation in Ex areas. These safety instructions are part of the operating instructions manual and come with the Ex-approved instruments.

2.10 Environmental instructions

Protection of the environment is one of our most important duties. That is why we have introduced an environment management system with the goal of continuously improving company environmental protection. The environment management system is certified according to DIN EN ISO 14001.

Please help us fulfil this obligation by observing the environmental instructions in this manual:

- Chapter "*Packaging, transport and storage*"
- Chapter "*Disposal*"

3 Product description

3.1 Configuration

Scope of delivery

The scope of delivery encompasses:

- VEGATOR 122 signal conditioning instrument
- Documentation
 - This operating instructions manual
 - Ex-specific "Safety instructions" (with Ex version)
 - Safety Manual "Functional safety (SIL) acc. to IEC 61508" (with SIL version)
 - If necessary, further certificates

Type label

The type label contains the most important data for identification and use of the instrument:

- Instrument type
- Product code
- Approvals
- Technical data
- Serial number of the instrument
- Data matrix code for VEGA Tools app

Serial number

The type label contains the serial number of the instrument. With it you can find the following data on our homepage:

- Product code of the instrument (HTML)
- Delivery date (HTML)
- Order-specific instrument features (HTML)
- Operating instructions at the time of shipment (PDF)
- Safety instructions and certificates

Go to "www.vega.com", "*Instrument search (serial number)*". Enter the serial number.

Alternatively, you can access the data via your smartphone:

- Download the "VEGA Tools" app from the "Apple App Store" or the "Google Play Store"
- Scan the Data Matrix code on the type label of the instrument or
- Enter the serial number manually in the app

3.2 Principle of operation

Application area

The VEGATOR 122 is a double-channel signal conditioning instrument for level detection with two level switches with 8/16 mA interface. Simple monitoring and control functions can be realised via the integrated relays. Typical applications are monitoring functions such as overfill and dry run protection. As an alternative to the double-channel level detection, a two-point control can be activated.

Functional principle

The VEGATOR 122 signal conditioning instrument powers connected sensors and simultaneously processes their measuring signals.

When the medium reaches the switching point of the sensor, the sensor current changes. This is measured and evaluated by VEGATOR 122. The change causes the output relays to switch according to the set operating mode.

Voltage supply

Wide range power supply with a nominal voltage of 24 ... 230 V AC, 50/60 Hz or 24 ... 65 V DC.

Detailed information about the power supply can be found in chapter "*Technical data*".

3.3 Adjustment

All adjustment elements are located under a hinged front plate. The operating mode, switch-on pulse monitoring and the switching delay can be set via a DIL switch block. In addition, the correct function of the measuring system can be checked by simply pressing a key.

3.4 Packaging, transport and storage**Packaging**

Your instrument was protected by packaging during transport. Its capacity to handle normal loads during transport is assured by a test based on ISO 4180.

The packaging of standard instruments consists of environment-friendly, recyclable cardboard. For special versions, PE foam or PE foil is also used. Dispose of the packaging material via specialised recycling companies.

Transport

Transport must be carried out in due consideration of the notes on the transport packaging. Nonobservance of these instructions can cause damage to the device.

Transport inspection

The delivery must be checked for completeness and possible transit damage immediately at receipt. Ascertained transit damage or concealed defects must be appropriately dealt with.

Storage

Up to the time of installation, the packages must be left closed and stored according to the orientation and storage markings on the outside.

Unless otherwise indicated, the packages must be stored only under the following conditions:

- Not in the open
- Dry and dust free
- Not exposed to corrosive media
- Protected against solar radiation
- Avoiding mechanical shock and vibration

Storage and transport temperature

- Storage and transport temperature see chapter "*Supplement - Technical data - Ambient conditions*"
- Relative humidity 20 ... 85 %

Lifting and carrying

With an instrument weight of more than 18 kg (39.68 lbs) suitable and approved equipment must be used for lifting and carrying.

4 Mounting

4.1 Mounting instructions

VEGATOR 122 is designed for carrier rail mounting (top hat rail 35 x 7.5 according to DIN EN 50022/60715). Due to its protection rating of IP 20, the instrument is suitable for mounting in switching cabinets. It can be mounted horizontally and vertically.



Note:

When several instruments are mounted together without space in between, the ambient temperature at the installation location of the instrument must not exceed 60 °C. Around the ventilation slots there must be a distance of at least 2 cm to the next component.



The VEGATOR 122 in Ex version is an associated, intrinsically safe instrument and must not be installed in hazardous areas. Safe operation is only ensured if the operating instructions and EU Type Approval Certificate are observed. VEGATOR 122 must not be opened. A certification for Ex Zone 2 is also available as an option.

Ambient conditions

The instrument is suitable for standard ambient conditions acc. to DIN/EN/IEC/ANSI/ISA/UL/CSA 61010-1.

Make sure that the degree of contamination specified in chapter "*Technical data*" meets the existing ambient conditions.

5 Connecting to power supply

5.1 Preparing the connection

Safety instructions

Always keep in mind the following safety instructions:



Warning:

Connect only in the complete absence of line voltage.

- Connect only in the complete absence of line voltage
- If overvoltage surges are expected, overvoltage arresters should be installed



Note:

Install a separating facility for the instrument which is easy to access. The separating facility must be marked for the instrument (IEC/EN 61010).

Safety instructions for Ex applications



In hazardous areas you must take note of the respective regulations, conformity and type approval certificates of the sensors and power supply units.

Voltage supply

The nominal range of the voltage supply can be 24 ... 230 V AC, 50/60 Hz or 24 ... 65 V DC.

Detailed information about the power supply can be found in chapter "Technical data".

Connection cable

The voltage supply of VEGATOR 122 is connected with standard cable according to the national installation standards.

The sensors are connected with standard two-wire cable without screen. If electromagnetic interference is expected which is above the test values of EN 61326 for industrial areas, screened cable should be used.

Make sure that the cable used has the required temperature resistance and fire safety for max. occurring ambient temperature

Cable screening and grounding

Connect the cable screen on both ends to ground potential. In the sensor, the screen must be connected directly to the internal ground terminal. The ground terminal on the outside of the sensor housing must be connected to the potential equalisation (low impedance).

If potential equalisation currents are expected, the connection on the processing side must be made via a ceramic capacitor (e. g. 1 nF, 1500 V). The low-frequency potential equalisation currents are thus suppressed, but the protective effect against high frequency interference signals remains.

Connection cable for Ex applications



Take note of the corresponding installation regulations for Ex applications. In particular, make sure that no potential equalisation currents flow over the cable screen. In case of grounding on both sides this can be achieved by the use of a capacitor or a separate potential equalisation.

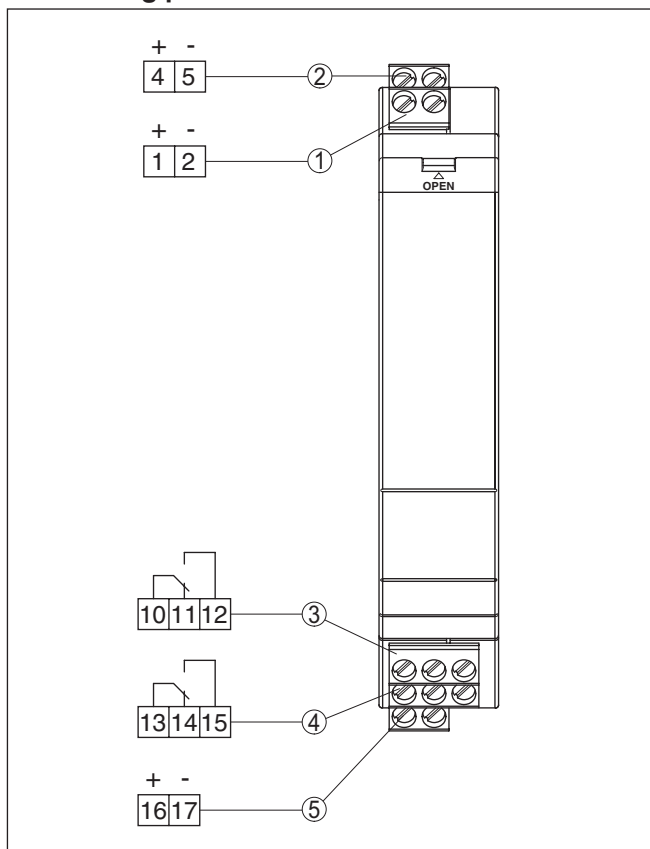
5.2 Connection procedure

The pluggable terminals can be removed as needed to allow more convenient connection. To make the electrical connection, proceed as follows:

1. Mount the instrument as described in the previous chapter
2. Connect sensor cable 1 to terminal 1/2, and where applicable, connect the screen
3. Connect sensor cable 2 to terminal 4/5, and where applicable, connect the screen
4. Connect switched-off power supply to terminal 16/17
5. Connect relay 1 to terminal 10/11/12
6. Connect relay 2 to terminal 13/14/15

The electrical connection is finished.

5.3 Wiring plan



- 1 Sensor circuit, channel 1 (8/16 mA), max. level with two-point control
- 2 Sensor circuit, channel 2 (8/16 mA), min. level with two-point control
- 3 Relay output channel 1
- 4 Relay output channel 2
- 5 Voltage supply

i

Information:

The connection terminals can be detached towards the front, if necessary. This can be useful when working in tight spaces or when exchanging an instrument.

6 Setup

6.1 Adjustment system

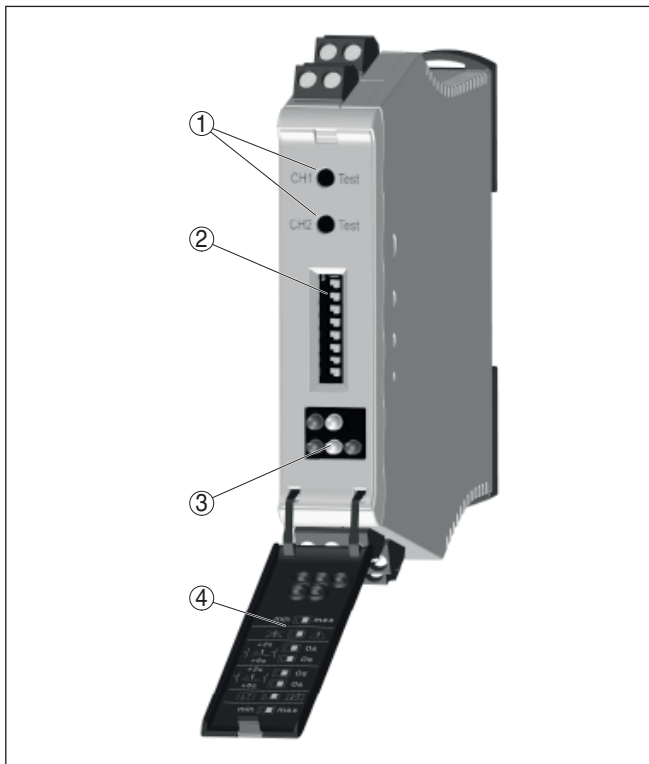


Fig. 2: Display and adjustment elements

- 1 Test keys, channel 1, 2
- 2 DIL switch block
- 3 Signal lamps (LEDs)
- 4 Hinged front cover

6.2 Adjustment elements

Control lamps

Control lamps (LED) in the front plate indicate operation, switching status and fault signal.

- Green
 - Operating control lamp
 - Mains voltage on, instrument is operating
- Red
 - Fault indicator
 - Fault on the sensor circuit due to sensor failure or line break
 - The relay deenergises in case of failure

- Yellow
 - Relay control lamp
 - Lights with activated (current-carrying) relay status

Front cover

The adjustment elements are located under a hinged front cover. To open it, use a small screwdriver in conjunction with the slot on the upper side of the front cover. To close it, push the cover at bottom and top firmly onto the front cover until you hear the two retaining clips snap in.

DIL switch block

The DIL switch block is located behind the front cover. The individual switches are assigned as follows:

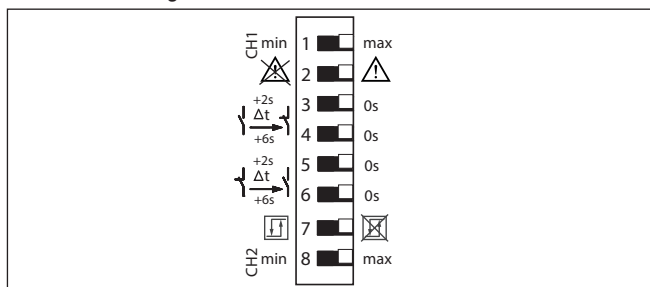


Fig. 3: DIL switch VEGATOR 122

- 1 Mode (min./max. adjustment), channel 1
- 2 Switch-on pulse monitoring On/Off
- 3 Switch-on delay 2 seconds
- 4 Switch-on delay 6 seconds
- 5 Switch-off delay 2 seconds
- 6 Switch-off delay 6 seconds
- 7 Two-point control On/Off
- 8 Mode (min./max. adjustment), channel 2

Mode (min./max. adjustment)

The requested operating mode is set with the min./max. switch (min. detection i.e. dry run protection or max. detection i.e. overfill protection)

- **Dry run protection:** Relay is switched off when the level falls below the min. level (safe currentless state), relay is switched on again when the min. level is exceeded (switch-on point > switch-off point)
- **Overflow protection:** Relay is switched off when the max. level is exceeded (safe currentless state), relay is switched on again when the level falls below the max. level (switch-on point < switch-off point)



Note:

If the connected sensor has an own mode switch, then this switch must be set to **"Max."**.

Switch-on pulse monitoring

While switching on, the sensors VEGASWING/VEGA VIB/VEGA WAVE deliver a defined switching sequence in which the switching conditions empty/full/failure are run through. This switching sequence is

checked and evaluated when switch-on pulse monitoring is activated. If this does not correspond to the definition or is completely missing, the VEGATOR 122 displays a fault. A function test is only triggered by pressing the test key. This function test is not carried out automatically when switching on the VEGATOR 122.



Note:

When connecting sensors without this defined switching sequence, the switch-on monitoring must be deactivated.

Switch-on/Switch-off delay

With these switches you can delay the changeover of the relays by the set time. This can be useful, e.g. with fluctuating product surfaces, for preventing unwanted switching commands. The switch-on/off delays can be set independently of each other. If both switches, e.g. of the switch-on delay, are activated, the times sum up. Delays of 2, 6 or 8 seconds can thus be adjusted.



Information:

Keep in mind that the switching delay of the sensor and signal conditioning instrument accumulate.

Two-point control

The following functionalities can be selected via this switch:

- Single point control (double channel level detection with one sensor each and the same switch on/switch off point)
- Two-point control (level detection with two sensors and different switch on/switch off points)

As opposed to single point control, two-point control allows the switch-on and switch-off points to be set at different locations (hysteresis). Through the installation or the distance of the two sensors, the hysteresis can be defined individually. Here, the max. level must be set to sensor input 1, the min. level to sensor input 2.

The two-point control is used for example when filling and emptying is carried out via a pump. The filling of a vessel can be for example switched on at 10 % and switched off again at 90 %. The output of the second channel behaves identically like the first channel provided the same mode is set. By changing the mode, the function of the relays can be inverted.

Test key

When level switches VEGASWING/VEGAVIB/VEGAWAVE in two-wire version are connected, a function test can be carried out. The test key is recessed behind the front plate of the signal conditioning instrument. Press the test key for at least two seconds with a suitable object (screwdriver, pen, etc.).

By pushing the test key, the circuit to the sensor is interrupted and a restart of the sensor is initiated. Through this, the conditions fault signal, empty and full alarm are simulated. The complete test procedure takes approx. 5 seconds. After correct function, the red failure LED should not light and depending on the status of the sensor, the relays are energized or deenergized.

If the test result is negative, the red failure LED lights up and the relays must be deenergized. In this case the whole measuring system has to be checked and repaired.









Note:
Keep in mind that downstream connected devices are activated during the function test. This allows you to check the correct function of the measuring system.

6.3 Function table "Point level"







The following table provides an overview of the switching conditions depending on the set mode and the level.

Note:
The switching conditions in the tables are only valid if the mode switch on the sensor is set to "Max.".

Overfill protection, point level

Sensor		Signal conditioning instrument		
Level	Sensor current	LED yellow (output)	LED red (fault)	Relay
	approx. 8 mA			ON
	approx. 16 mA			OFF
any	< 3.6 mA > 21 mA			OFF

Dry run protection, point level

Sensor		Signal conditioning instrument		
Level	Sensor current	LED yellow (output)	LED red (fault)	Relay
	approx. 16 mA			ON
	approx. 8 mA			OFF

Sensor		Signal conditioning instrument		
Level	Sensor current	LED yellow (output)	LED red (fault)	Relay
any	< 3.6 mA > 21 mA	○	☀	OFF

6.4 Function table, two-point control






The following charts provide an overview of the switching conditions depending on the set mode and the level.











Note:

The switching conditions in the tables are only valid if the mode switch on the sensor is set to "**Max.**".

Overfill protection, two-point control

Sensor		Signal conditioning instrument		
Level	Sensor current	LED yellow (output)	LED red (fault)	Relay
	approx. 8 mA approx. 8 mA	☀	○	ON
	approx. 8 mA approx. 16 mA	☀	○	ON
	approx. 16 mA approx. 16 mA	○	○	OFF
	approx. 8 mA approx. 16 mA	○	○	OFF
	approx. 8 mA approx. 8 mA	☀	○	ON
any	< 3.6 mA > 21 mA	○	☀	OFF

Dru run protection, two-point control

Sensor		Signal conditioning instrument		
Level	Sensor current	LED yellow (output)	LED red (fault)	Relay
	approx. 8 mA approx. 8 mA	○	○	OFF
	approx. 8 mA approx. 16 mA	○	○	OFF
	approx. 16 mA approx. 16 mA		○	ON
	approx. 8 mA approx. 16 mA		○	ON
	approx. 8 mA approx. 8 mA	○	○	OFF
any	< 3.6 mA > 21 mA	○		OFF

7 Maintenance and fault rectification

7.1 Maintenance

If the device is used properly, no special maintenance is required in normal operation.

7.2 Rectify faults

Causes of malfunction

Maximum reliability is ensured. Nevertheless, faults can occur during operation. These may be caused by the following, e.g.:

- Measured value from sensor not correct
- Voltage supply
- Interference in the cables

Fault rectification

The first measure to be taken is to check the input and output signals. The procedure is described as follows. In many cases the causes can be determined this way and faults can be easily rectified.

24 hour service hotline

Should these measures not be successful, please call in urgent cases the VEGA service hotline under the phone no. **+49 1805 858550**.

The hotline is manned 7 days a week round-the-clock. Since we offer this service worldwide, the support is only available in the English language. The service is free, only standard call charges are incurred.

Reaction after fault rectification

Depending on the reason for the fault and the measures taken, the steps described in chapter "Set up" may have to be carried out again.

Red fault LED lights up

Cause	Rectification
Sensor not connected correctly	<ul style="list-style-type: none"> ● In Ex systems, make sure that the Ex protection is not influenced by the measuring instruments used. ● Measure the current and voltage on the connection cable to the sensor ● Faults in the sensor causing a current change to below 3.6 mA or over 21 mA lead to a fault signal in the signal conditioning instruments. ● The terminal voltage must be inside the specified range. You can find this voltage range in the operating instructions of the connected sensor.
Sensor delivers no (correct) switch-on pulse	<ul style="list-style-type: none"> ● Use sensor with switching-on pulse ● Deactivate switch-on pulse monitoring

Cause	Rectification
Sensor current < 3.6 mA	<ul style="list-style-type: none"> ● Check signal conditioning instrument ● Check the terminal voltage on the signal conditioning instrument; if it is < 17 V, the signal conditioning instrument is defective -> exchange signal conditioning instrument or return it for repair ● If the terminal voltage is > 17 V, disconnect the sensor cable at the signal conditioning instrument and replace it with a 1 kΩ resistor. If the fault signal does not disappear, the signal conditioning instrument is defective -> exchange signal conditioning instrument or return it for repair ● Check sensor or sensor cable ● Reconnect the sensor cable to the signal conditioning instrument, disconnect the sensor and replace it with a 1 kΩ resistor. If the fault signal does not disappear, then the sensor cable is broken -> replace the sensor cable ● If there is no longer a fault signal on the line, the sensor is defective -> exchange sensor or return it for repair
Sensor current > 21 mA	<ul style="list-style-type: none"> ● Check signal conditioning instrument ● Disconnect sensor cable and replace it with a 1 kΩ resistor. If the fault signal does not disappear, the signal conditioning instrument is defective -> exchange signal conditioning instrument or return it for repair ● Check sensor or sensor cable ● Reconnect the sensor cable to the signal conditioning instrument, disconnect the sensor and replace it with a 1 kΩ resistor. If the fault signal does not disappear, then the sensor cable is short-circuited -> eliminate the short-circuit or replace the sensor cable ● If there is no longer a fault signal on the line, the sensor is defective -> exchange sensor or return it for repair

7.3 How to proceed if a repair is necessary

You can find an instrument return form as well as detailed information about the procedure in the download area of our homepage: www.vega.com.

By doing this you help us carry out the repair quickly and without having to call back for needed information.

If a repair is necessary, please proceed as follows:

- Print and fill out one form per instrument
- Clean the instrument and pack it damage-proof
- Attach the completed form and, if need be, also a safety data sheet outside on the packaging
- Please contact the agency serving you to get the address for the return shipment. You can find the agency on our home page www.vega.com.

8 Dismount

8.1 Dismounting steps

Take note of chapters "*Mounting*" and "*Connecting to power supply*" and carry out the listed steps in reverse order.

8.2 Disposal

The instrument consists of materials which can be recycled by specialised recycling companies. We use recyclable materials and have designed the electronics to be easily separable.

WEEE directive 2002/96/EG

This instrument is not subject to the WEEE directive 2002/96/EG and the respective national laws. Pass the instrument directly on to a specialised recycling company and do not use the municipal collecting points. These may be used only for privately used products according to the WEEE directive.

Correct disposal avoids negative effects on humans and the environment and ensures recycling of useful raw materials.

Materials: see chapter "*Technical data*"

If you have no way to dispose of the old instrument properly, please contact us concerning return and disposal.

9 Supplement

9.1 Technical data

Note for approved instruments

The technical data in the respective safety instructions are valid for approved instruments (e.g. with Ex approval). In some cases, these data can differ from the data listed herein.

General data

Series	Module unit for mounting on carrier rails 35 x 7.5 acc. to EN 50022/60715
Weight	125 g (4.02 oz)
Housing material	Polycarbonate PC-FR
Connection terminals	
– Type of terminal	Screw terminal
– Wire cross-section	0.25 mm ² (AWG 23) ... 2.5 mm ² (AWG 12)

Voltage supply

Operating voltage	
– Nominal voltage AC	24 ... 230 V (-15 %, +10 %) 50/60 Hz
– Nominal voltage DC	24 ... 65 V DC (-15 %, +10 %)
Max. power consumption	3 W (8 VA)

Sensor input

Quantity	2 x analogue
Input type	Active (sensor power supply by VEGATOR 122)
Measured value transmission	Analogue 8/16 mA
Switching threshold	
– On	12.1 mA
– Off	11.9 mA
– Tolerance	± 500 µA
Current limitation	23 mA (permanently short-circuit proof)
Terminal voltage	18.2 V DC, ± 5 %
Internal resistance	200 Ω, ± 1 %
Detection line break	≤ 3.6 mA
Detection shortcircuit	≥ 21 mA

Relay output

Quantity	2 x operating relay
Contact	Floating spdt
Contact material	AgSnO ₂ , hard gold-plated
Switching voltage	min. 10 mV DC, max. 253 V AC/50 V DC
Switching current	min. 10 µA DC, max. 3 A AC, 1 A DC

Breaking capacity ¹⁾	min. 50 mW, max. 500 VA, max. 54 W DC
Phase angle $\cos \phi$ with AC	≥ 0.7
Switch-on/Switch-off delay	
– Basic delay	150 ms, $\pm 10 \%$
– Adjustable delay	2/6/8 s, $\pm 20 \%$

Indicators

LED displays

– Status, operating voltage	1 x LED green
– Status, fault signal	2 x LED red
– Status, operating relay	2 x LED yellow

Adjustment

8 x DIL switch	Mode setting, switching delay, function control
2 x test key	for function test

Ambient conditions

Ambient temperature at the installation site of the instrument	-20 ... +60 °C (-4 ... +140 °F)
Storage and transport temperature	-40 ... +70 °C (-40 ... +158 °F)
Relative humidity	< 96 %

Electrical protective measures

Protection rating	IP 20
Overvoltage category (IEC 61010-1)	
– up to 2000 m (6562 ft) above sea level	II
– up to 5000 m (16404 ft) above sea level	II - Only with connected overvoltage protection
– up to 5000 m (16404 ft) above sea level	I
Protection class	II
Pollution degree	2

Measures for electrical separation

Reliable separation according to VDE 0106 part 1 between all circuits	
– Reference voltage	253 V
– Insulation resistance	4.2 kV

Approvals

Instruments with approvals can have different technical specifications depending on the version.

¹⁾ If inductive loads or stronger currents are switched through, the gold plating on the relay contact surface will be permanently damaged. The contact is then no longer suitable for switching low-level signal circuits.

For that reason the associated approval documents of these instruments have to be carefully noted. They are part of the delivery or can be downloaded under www.vega.com "Instrument search (serial number)" as well as in the general download area.

9.2 Dimensions

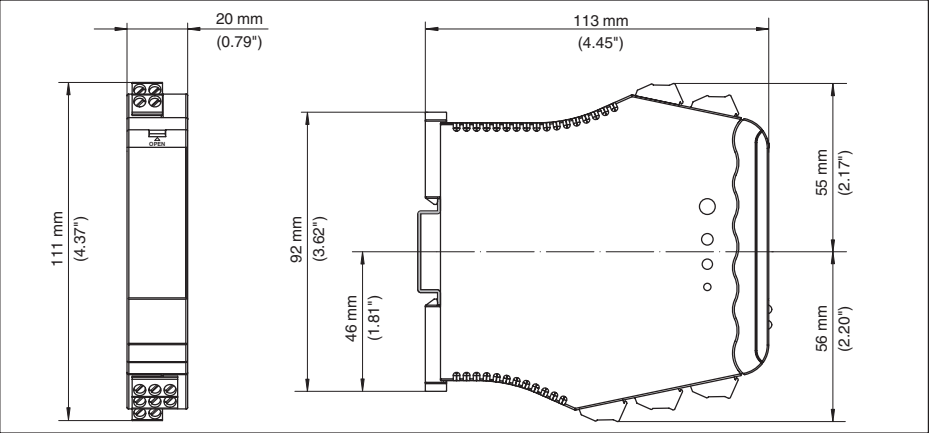


Fig. 54: Dimensions VEGATOR 122

9.3 Industrial property rights

VEGA product lines are global protected by industrial property rights. Further information see www.vega.com.

VEGA Produktfamilien sind weltweit geschützt durch gewerbliche Schutzrechte.

Nähere Informationen unter www.vega.com.

Les lignes de produits VEGA sont globalement protégées par des droits de propriété intellectuelle. Pour plus d'informations, on pourra se référer au site www.vega.com.

VEGA lineas de productos están protegidas por los derechos en el campo de la propiedad industrial. Para mayor información revise la pagina web www.vega.com.

Линии продукции фирмы ВЕГА защищаются по всему миру правами на интеллектуальную собственность. Дальнейшую информацию смотрите на сайте www.vega.com.

VEGA系列产品在全球享有知识产权保护。

进一步信息请参见网站www.vega.com。

9.4 Trademark

All the brands as well as trade and company names used are property of their lawful proprietor/originator.

INDEX

C

Cable screen 10
Carrier rail 9
Causes of malfunction 19
Connection 12
Connection cable 10
Control lamps 13

D

Data matrix code 7
Documentation 7
Dry run protection 14

E

Ex version 9

F

Fault rectification 19

G

Grounding 10

H

Hysteresis 15

I

Instrument return form 20

L

LEDs 13

M

Mode 14

O

Operating instructions 7
Overflow protection 14

P

Potential equalisation 10
Protection rating 9

R

Recycling 21
Repair 20

S

Serial number 7
Service hotline 19
SIL 6

Switch-off delay 15
Switch-on delay 15
Switch-on pulse checking 14

T

Test key 15
Two-point control 15
Type label 7

V

VEGA Tools app 7
Voltage supply 10

W

WEEE directive 21

Printing date:

VEGA

All statements concerning scope of delivery, application, practical use and operating conditions of the sensors and processing systems correspond to the information available at the time of printing.

Subject to change without prior notice

© VEGA Grieshaber KG, Schiltach/Germany 2017



46108-EN-170907

VEGA Grieshaber KG
Am Hohenstein 113
77761 Schiltach
Germany

Phone +49 7836 50-0
Fax +49 7836 50-201
E-mail: info.de@vega.com
www.vega.com